

PROGRAMMING	Feature	Active Level	Debounce
PIN #17	Channel Select 1	Low	X
PIN #19	Channel Select 2	Low	X
PIN #20	Channel Select 3	Low	X
PIN #21	Channel Select 4	Low	X

	Nothing Attached
X	PIN Is Grounded

	PIN#17	PIN #19	PIN #20	PIN# 21
Channel #1				
Channel #2	X			
Channel #3		X		
Channel #4	X	X		
Channel #5			X	
Channel #6	X		X	
Channel #7		X	X	
Channel #8	X	X	X	
Channel #9				X
Channel #10	X			X
Channel #11		X		X
Channel #12	X	X		X
Channel #13			X	X
Channel #14	X		X	X
Channel #15		X	X	X
Channel #16	X	X	X	X

Channel Your Repeater Is Actually Steered To
 By Shorting The Above Accessory Pins

There Can Be Up To A 40 Second Delay Before
 The Repeater Becomes Usable Once Again